

WORKSHOP MANUAL

DAIHATSU

F300

[HD-ENGINE]

FOREWORD

This workshop manual describes the maintenance and servicing procedures for Type HD engines which are mounted on the Daihatsu F300.

In this workshop manual, the entire portion is divided into 11 sections and four supplements. Each section has an index along with a table of contents at the beginning. For easier reference, the upper part of each page bears the section title concerned.

All information used in this workshop manual was in effect at the time when the manual was approved for printing. However, the specifications and procedures may be revised due to the continuing improvements in the design without advance notice and without incurring any obligation to us.

Published in February, 1989

DAIHATSU MOTOR CO., LTD.

WN88E-00001

SECTION INDEX

NAME	SECTION
GENERAL INFORMATION	GI
MAINTENANCE	MA
ENGINE MECHANICALS	EM
EMISSION CONTROL SYSTEMS	EC
EFI SYSTEM	EF
FUEL SYSTEM	FU
COOLING SYSTEM	CO
LUBRICATION SYSTEM	LU
IGNITION SYSTEM	IG
STARTING SYSTEM	ST
CHARGING SYSTEM	CH
SST	A
SERVICE SPECIFICATIONS	B
TIGHTENING TORQUE	C
WIRING DIAGRAM	D

NOTE:

Type HD engine comes in two kinds: One is a carburetor-equipped engine. The other is an EFI-equipped engine.

For simplified expression, the carburetor-equipped engine is coded merely as Type HD-C engine, whereas the EFI-equipped engine is coded merely as Type HD-E engine in this Workshop Manual.